

LAMBRIGHT ROLLER INSTALL

OUR ROLLERS WILL ACCOMODATE SHORT RAISE SLIDES BETWEEN 2" - 3.5" HIGH.




Tools needed: Screw gun and drill.
Drill is optional but helpful.



Use wood blocks or similar to level frame with the slideout.




Position roller on either side of motor and mark holes.
Can be mounted with either 2 or 4 screws or nuts and bolts.

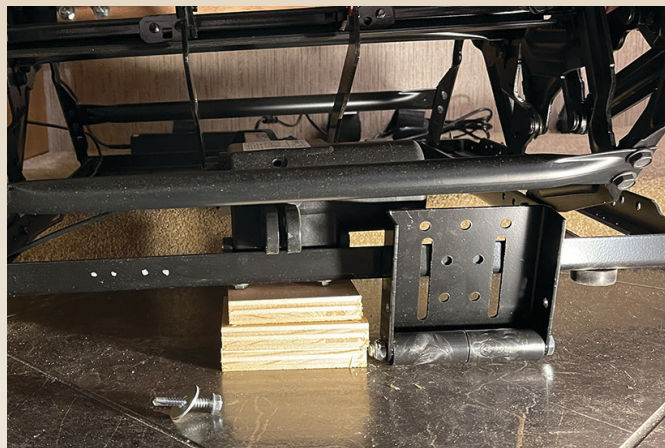

Multiple hole patterns allow for different slide heights 2" - 3.5"



Optional drill can be used to drill smaller pilot holes for screws or holes for mounting with nuts and bolts.

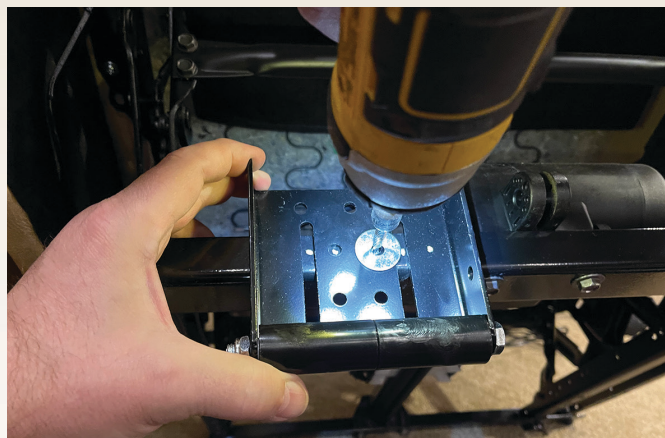

Final step is to attach the roller with self-tapping screws or bolt through the frame with nuts and bolts (not shown).

